


# SiteDialerEdit

## USER MANUAL

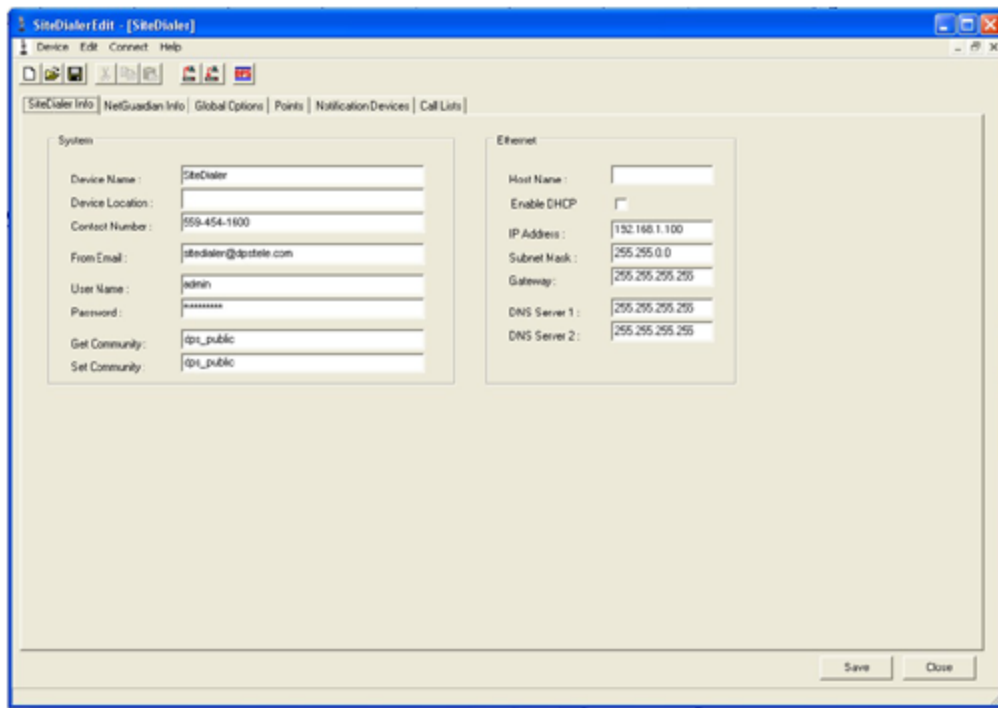

The screenshot shows the SiteDialerEdit application window with the following configuration fields:

System	Ethernet
Device Name : SiteDialer	Host Name :
Device Location :	Enable DHCP : <input type="checkbox"/>
Contact Number : 559-454-1800	IP Address : 192.168.1.100
From Email : sitedialer@dpstele.com	Subnet Mask : 255.255.0.0
User Name : admin	Gateway : 255.255.255.255
Password :	DNS Server 1 : 255.255.255.255
Get Community : dpri_public	DNS Server 2 : 255.255.255.255
Set Community : dpri_public	

Buttons: Save, Close

Visit our website at [www.dpstelecom.com](http://www.dpstelecom.com) for the latest PDF manual and FAQs.

Revision History	
March 27, 2014	Added "DX1-3 Alg 1-8" to "Points Tab" section
August 1, 2012	Updated Global Options Tab information
May 18, 2011	Included instructions regarding new "Server Mode"
July 16, 2009	Revisions to NetGuardian Info Tab, Points Tab, addition of Quick Starts, and Message Format. (D-OC-UM097.16100)
June 12, 2009	SiteDialerEdit User Manual released (D-OC-UM096.12100)

This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied without prior written consent of DPS Telecom.

All software and manuals are copyrighted by DPS Telecom. Said software and manuals may not be reproduced, copied, transmitted or used to make a derivative work, by either mechanical, electronic or any other means in whole or in part, without prior written consent from DPS Telecom, except as required by United States copyright laws.

© 2011 DPS Telecom

#### Notice

The material in this manual is for information purposes and is subject to change without notice. DPS Telecom shall not be liable for errors contained herein or consequential damages in connection with the furnishing, performance, or use of this manual.

# Contents

---

Visit our website at [www.dpstelecom.com](http://www.dpstelecom.com) for the latest PDF manual and FAQs

<b>1</b>	<b>Introduction</b>	<b>1</b>
1.1	Configuring the SiteDialer	1
<b>2</b>	<b>Help Menus</b>	<b>1</b>
<b>3</b>	<b>Configuration</b>	<b>2</b>
3.1	Getting Started	2
3.2	SiteDialer Tabs	3
3.2.1	SiteDialer Info Tab	3
3.2.1.1	Ethernet	4
3.2.2	NetGuardian Info Tab	4
3.2.2.1	Browse for an Associated NetGuardian Database	5
3.2.3	Global Options Tab	6
3.2.3.1	Server Mode	7
3.2.4	Notification Devices Tab	7
3.2.4.1	Notification Schedules	8
3.2.5	Phone List	9
3.2.6	Call List Tab	10
3.2.7	Points Tab	11
<b>4</b>	<b>Quick Start: How to Import Points</b>	<b>13</b>
4.1	Message Format	13
<b>5</b>	<b>Quick Start: How to Create Alarm Shout Configurations</b>	<b>15</b>
5.1	Create Voice Configurations	15
<b>6</b>	<b>Technical Support</b>	<b>16</b>
<b>7</b>	<b>End User License Agreement</b>	<b>17</b>

# 1 Introduction

The SiteDialerEdit is an offline, Windows-based editor for the NetGuardian SiteDialer. With it, you will determine system settings, connection information for your NetGuardian, point parameters, and other information, then upload your configuration to your SiteDialer over LAN.

With the SiteDialerEdit application, you can easily manage multiple SiteDialer units and keep separate, offline copies of databases for all your SiteDialer units.

You can also read configuration files from a remote SiteDialer for local editing/provisioning by simply entering the IP address and password of your SiteDialer. SiteDialerEdit supports Windows 95, 98, NT, ME, XP and 2000 and SiteDialer firmware versions 1.0A and above.

## 1.1 Configuring the SiteDialer

Your NetGuardian will listen for the SiteDialer on a user-defined TCP port. (You'll configure this TCP port as a notification on the NetGuardian.) The SiteDialer will then receive notice of alarms from the NetGuardian and relay voice notification for those alarms.

**At minimum, to receive alarms from your NetGuardian**, you must:

1. Provide the SiteDialer with the IP address of the NetGuardian
2. Provide the SiteDialer with the open TCP port on the NetGuardian to which it will connect
3. Upload the NetGuardian's alarm database to the SiteDialer so it can parse alarms.

**At minimum, to send voice alerts from the SiteDialer** (for alarms set by the NetGuardian), you must:

 
1. Enter phone numbers for the technicians you wish to receive voice notifications for alarms
2. Assign phone numbers to call lists
3. Assign call lists to alarms.

# 2 Help Menus

You can access help menus within the SiteDialerEdit program at any time by clicking **Help > Help**.

## 3 Configuration

### 3.1 Getting Started



Create a new directory or open an existing one from the SiteDialerEdit menu

With the SiteDialerEdit application, you can configure a new SiteDialer unit, open an existing SiteDialer configuration, or import a configuration file directly from an existing SiteDialer station.


#### Creating a new SiteDialer Configuration:


- Click the  button
- Or
- Navigate to **Device > New Device**

#### Opening a locally saved, existing configuration:

- Click the  button
- Or
- Navigate to **Device > Open Device**
- And
- Find your locally saved configuration file.

#### Reading a configuration from an existing SiteDialer station:

1. Open a new or existing configuration file (using any of the methods above)
2. Click the  button or navigate to **Connect > Read from unit**
3. Enter your IP address, Login, and Password (see Fig. 1).
4. Click **Read**.

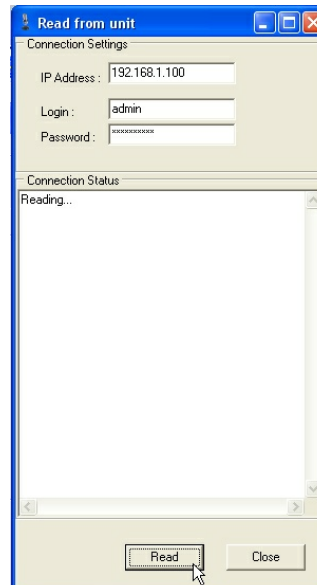

**Fig. 1** Read SiteDialer configuration information by entering the IP address, login and password of the SiteDialer

**Note:** If not triggering SiteDialer notifications with a NetGuardian, the SiteDialer must still receive config files in same message format. Refer to the **Message Format** section of this manual for more information

## 3.2 SiteDialer Tabs

### 3.2.1 SiteDialer Info Tab


**Fig. 2** SiteDialer Info Tab: General Options

The **SiteDialer Info** tab provides options for basic SiteDialer setup, including username, password, system information, ethernet settings, and SNMP community settings. See the table below for available fields in the SiteDialer Info tab.

System	
Field	Description
<b>Device Name:</b>	Assign the SiteDialer a name of your choice. For easy identification, it's a good idea to assign a name that will be meaningful to everyone who uses the SiteDialer.
<b>Device Location</b>	Type in the physical location of the SiteDialer. This is very useful for keeping track of different units.
<b>Contact Number</b>	Type in a phone number or email address for the person responsible for this SiteDialer unit.
<b>From Email:</b>	Type in the display email address used in email alarm notifications. From Email can also be edited in Notification Devices Tab.
<b>User Name:</b>	Assign a user name, which must be at least 3 characters long. For security reasons, DPS recommends a minimum length of at least 5 characters. The factory default user name is admin.
<b>Password</b>	Assign a password, which must also be at least 3 characters long. For security reasons, DPS recommends a minimum password length of at least 5 characters. The factory default password is dpstelecom.
<b>Get Community</b>	Type in the community string for SNMP Get requests
<b>Set Community</b>	Type in the community string for SNMP Set requests

*Available fields in the SiteDialer Info tab*

### 3.2.1.1 Ethernet

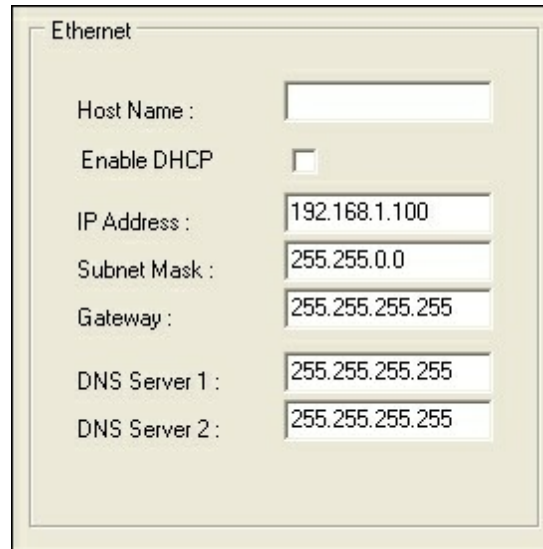

Ethernet

Host Name :

Enable DHCP ☐

IP Address :

Subnet Mask :

Gateway :

DNS Server 1 :


DNS Server 2 :

**Fig. 3** Ethernet Connection

You'll configure your SiteDialer's ethernet port from the SiteDialer Info tab in the **Ethernet** section. See the table below for descriptions of available Ethernet fields in the SiteDialer Info tab.

Ethernet	
Field	Description
<b>Host Name</b>	The NetBios Name of the Device
<b>Enable DHCP</b>	Toggles Dynamic Host Connection Protocol. Enabling DHCP disables the user-defined IP address as the DHCP server will assign the SiteDialer's IP address instead.
<b>IP address</b>	The IP address of the SiteDialer.
<b>Subnet mask</b>	A Path defining whether your packets should stay on your local network or get forwarded to an address on your Wide Area Network.
<b>Gateway</b>	Default Gateway path
<b>DNS Server 1 to 2</b>	Enter the IP addresses of your domain name servers.

### 3.2.2 NetGuardian Info Tab

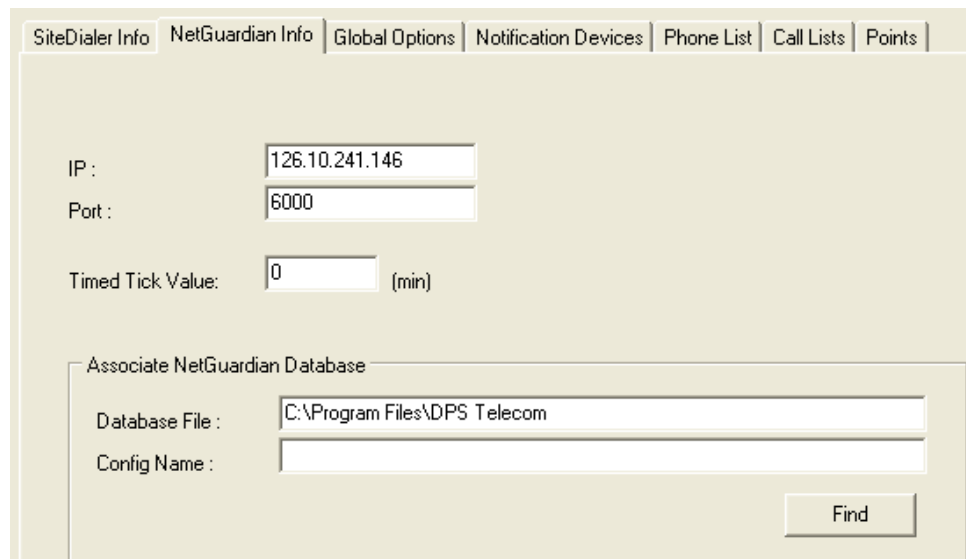

SiteDialer Info | **NetGuardian Info** | Global Options | Notification Devices | Phone List | Call Lists | Points

IP :

Port :

Timed Tick Value:  (min)

Associate NetGuardian Database

Database File :

Config Name :

Find

**Fig. 4** Connect Site Dialer to NetGuardian by entering IP address and port number for NetGuardian

For your SiteDialer to send voice notification for your NetGuardian's alarms, you must specify the IP address of the NetGuardian and the TCP port you've opened on the NetGuardian in the notification section. You'll also have to import your NetGuardian's database to provide alarm definitions for the SiteDialer.

For information on configuring your NetGuardian to communicate with the SiteDialer (via TCP notification), see the SiteDialer user manual.

To configure your SiteDialer to receive alarms from a NetGuardian, you must configure:

1. The IP address of the NetGuardian
2. The TCP **Port** opened on the NetGuardian for communications with the SiteDialer
3. The NetGuardian's **Database File**

See the table below for descriptions of available fields in the **NetGuardian Info** tab.

Field	Description
<b>IP</b>	The IP address of the NetGuardian from which the SiteDialer will receive alarms
<b>Port</b>	The number of the open NetGuardian TCP port for SiteDialer communications. You'll configure this port first on the NetGuardian by setting-up a TCP-type pager/notification. For more information about TCP Notifications and opening a port for communication with the SiteDialer, see your SiteDialer user manual
<b>Timed Tick Value</b>	The interval at which the SiteDialer will check for and report local alarms (alarms specific to the SiteDialer itself). If set to 0, the SiteDialer will not set or report local alarms.
<b>Associate NetGuardian Database</b>	
<b>Database File</b>	Click <b>Find</b> to locate your NetGuardian's alarm database file
<b>Config Name</b>	This field displays the name of the database file selected from the directory indicated in the <b>Database File</b> field


*available fields in the NetGuardian Info tab*

### 3.2.2.1 Browse for an Associated NetGuardian Database


For your SiteDialer to be able to send voice notifications with appropriate alarm descriptions from your NetGuardian, you'll have to load it with your NetGuardian's alarm database.

**Note:** SiteDialerEdit will not allow you to download your configuration directly from your NetGuardian. If you do not have a locally saved NetGuardian configuration file, you may read a configuration file from your NetGuardian using the NGEEdit program.

#### To import your NetGuardian's alarm database to SiteDialerEdit:

1. On the NetGuardian Info tab, click **Find**.
2. Next to the **Find in directory** field, click .
3. Locate the directory in which you've saved your NetGuardian's alarm database, and click **Ok**
4. (Optional) If there are multiple databases in the directory you've chosen, enter the IP address of the NetGuardian you're searching for to help narrow your search.
5. Click **Search**
6. In the **Select from matched configs** area at the bottom of the window, locate your NetGuardian's database. If multiple NetGuardian configuration files appear, use the Net1 and Net2 IP address fields to help you locate the correct one.
7. Click **Ok**.



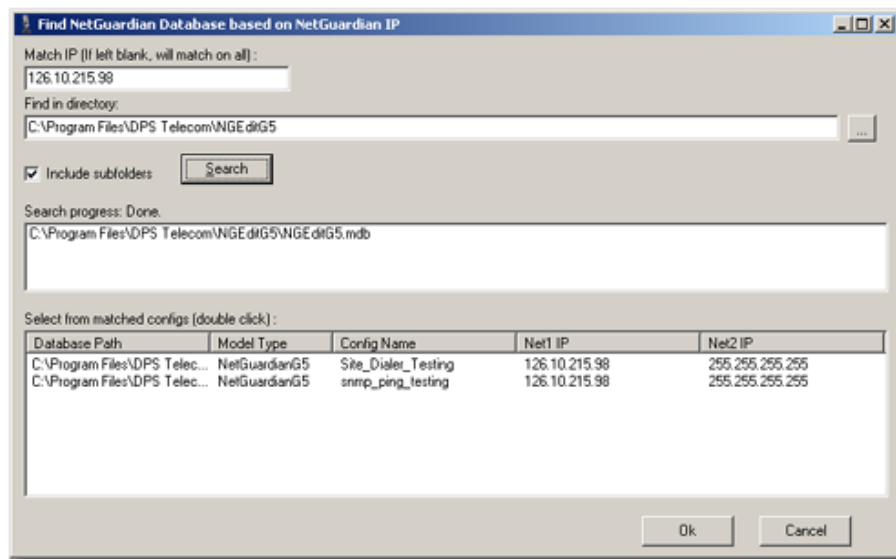

**Fig. 5** Search for NetGuardian Database by entering IP address

### 3.2.3 Global Options Tab

**Fig. 6** Global Options for call settings

The **Global Options** tab contains various inbound DTMF and outbound notification settings for the SiteDialer. See the table below for descriptions of available fields in the Global Options tab.

Field	Description
<b>Call Unit ID</b>	The display ID of your SiteDialer. SiteDialer notifications will include the call unit ID.
<b>Play site name instead of unit ID</b>	If checked, the SiteDialer will play its device name rather than its unit ID in outbound alarm notifications.
<b>DTMF Password</b>	The code incoming callers will dial to acknowledge alarms and perform other DTMF functions.
<b>Call Delay</b>	The time the SiteDialer will wait between calls as it progresses through a call list. <b>Note:</b> The SiteDialer will only continue sending notifications if an alarm has not yet been acknowledged. Once a technician acknowledges an alarm, the SiteDialer will cease sending notifications.

<b>Disable Ring Detect</b>	This option is designed to solve an issue related to DTMF connections from certain phones. <b>Do not</b> enable this option unless given expressed direction from DPS Support.
<b>Voice Prompt Delay</b>	The amount of time the unit will wait for input from the user when giving verbal options over the phone.

*fields available in the global options tab*

### 3.2.3.1 Server Mode

Enabling **Server Mode** allows the SiteDialer to listen for a connection from an alarm reporting device rather than attempting to open a connection with the IP address configured in the NetGuardian Info tab.

**Note: Server Mode is not compatible with NetGuardian RTUs.** NetGuardian RTUs operate as servers for client SiteDialers. NetGuardian RTUs cannot be configured as clients and therefore are incompatible with a SiteDialer operating in Server Mode.

To enable Server Mode:

1. Click the **Server** radio button
2. In the **Server Port** field, enter the TCP port that the site dialer will open to receive alarms.

**Note:** In this mode, the SiteDialer can receive alarms from multiple sources. However, it can only receive alarms from one source at a time. Once the SiteDialer is engaged and receiving an alarm, it will not accept an alarm from another source until the connection is complete (the remote has finished sending alarms).

In order for the SiteDialer to send voice notification for devices that connect to it in server mode, alarms must be sent in the format listed in the **Message Format** section of this manual.

### 3.2.4 Notification Devices Tab

The screenshot shows the 'Notification Devices' tab in the SiteDialerEdit application. The 'From Email' field is set to 'sitedialer@dpstele.com'. The 'Notification Summary' table is as follows:

Enable	Type	Server Name/ IP Address	Port	"To" Email / Trap Community	Schedule 1	Schedule 2
N1 <input type="checkbox"/>	Email		25		Sun, Mon, Tue, Wed, Thu, Fri, Sat Any Time	Sun, Mon, Tue, Wed, Thu, Fri, Sat Any Time
N2 <input type="checkbox"/>	Email		25		Sun, Mon, Tue, Wed, Thu, Fri, Sat Any Time	Sun, Mon, Tue, Wed, Thu, Fri, Sat Any Time
N3 <input type="checkbox"/>	Email		25		Sun, Mon, Tue, Wed, Thu, Fri, Sat Any Time	Sun, Mon, Tue, Wed, Thu, Fri, Sat Any Time
N4 <input type="checkbox"/>	Email		25		Sun, Mon, Tue, Wed, Thu, Fri, Sat Any Time	Sun, Mon, Tue, Wed, Thu, Fri, Sat Any Time

**Fig. 7** Notification Devices Tab

From the Notification Devices tab, you'll configure the SiteDialer to send email notifications or SNMP traps when alarms occur.

#### To setup email notifications:

1. in the **From Email** field, enter the email address your SiteDialer will send alarm notifications **From**.

**Note:** This doesn't have to be a legitimate email address. You won't have to send email back to the SiteDialer. However, many email servers will not route email sent from an email address with an invalid format. So, ensure the "From Email" address is correctly formatted "[name@domain.com](#)".

2. Check the **Enable** box to enable the notification
3. Use the drop-down box to set the **Type** to **Email**.
4. In the **Server Name/IP Address** field, enter the IP address of your outgoing mail (SMTP) server.
5. Enter the port address of your mail server (typically 25 - the default setting).
6. In the **"To"Email/Trap Community** field, enter the full email address of the person to which the SiteDialer will send email alarm notifications.
7. Click the Hyperlinks in the **Schedule 1** and **Schedule 2** columns to set the email notification schedule.


#### To Setup SNMP notifications (traps):

1. Check the **Enable** box to enable the notification
2. Use the drop-down box to set the **Type** to **SNMP**
3. In the **Server Name/IP Address** field, enter the IP address of your SNMP server
4. Enter **162** in the **Port** field
5. Input your **SNMP Community String** in the **"To" Email/Trap Community** field.
6. Click the Hyperlinks in the **Schedule 1** and **Schedule 2** columns to determine when the SiteDialer can send SNMP Traps.

#### 3.2.4.1 Notification Schedules


Notification schedules allow you to determine when the SiteDialer can send email notifications or SNMP traps for alarms. To set a notification schedule, click on the blue hyperlink in the **Schedule 1** or **Schedule 2** columns. (Clicking either hyperlink will allow you to edit both notification schedules.)

Use the checkboxes to determine which days the SiteDialer can issue the notification. Use the drop-down time boxes to determine the times of day between which the SiteDialer can send notifications.

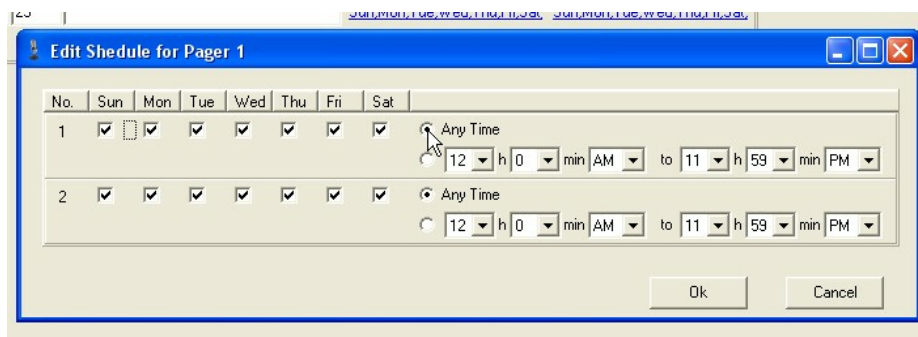

**Fig. 8** Edit Schedule for Pager Notification

### 3.2.5 Phone List

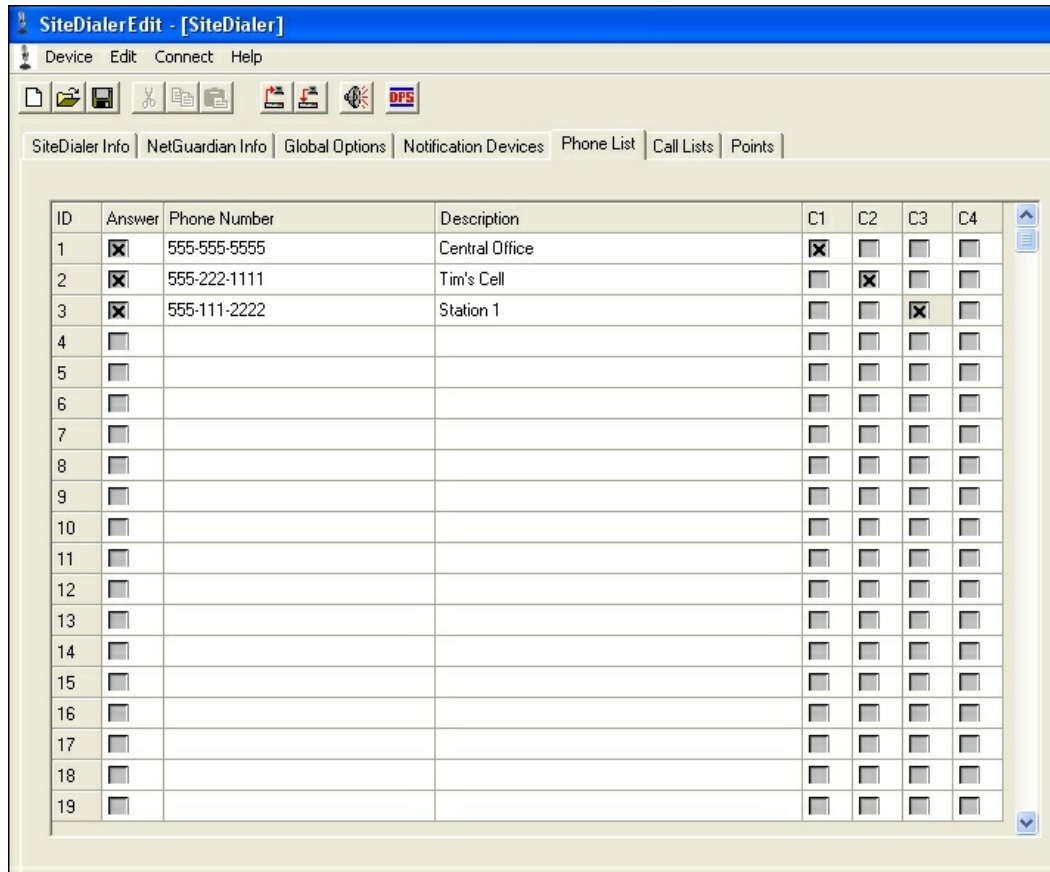


**Fig. 9** Call List Tab

From the **Phone List** tab, you can create a directory the SiteDialer will use to send voice notifications for alarms. Fill in the appropriate fields for each number added to the directory

Field	Description
<b>Answer</b>	Check this box to indicate that there is an answering machine on this phone number.
<b>Phone Number</b>	The Phone Number the SiteDialer will call to issue voice notifications
<b>Description</b>	A description of the phone contact
<b>C1-C4</b>	Call List designations. Check a box to add it to the appropriate call list. A phone number may belong to multiple call lists. You'll configure the order in which the SiteDialer will call members of the call list and the call list schedule from the <b>Call List</b> tab.

**Note:** Active phone numbers must be members of a call list (C1-C4) in order to receive voice alarm notifications. The SiteDialer only calls members of a call list, not individual phone numbers.

### 3.2.6 Call List Tab

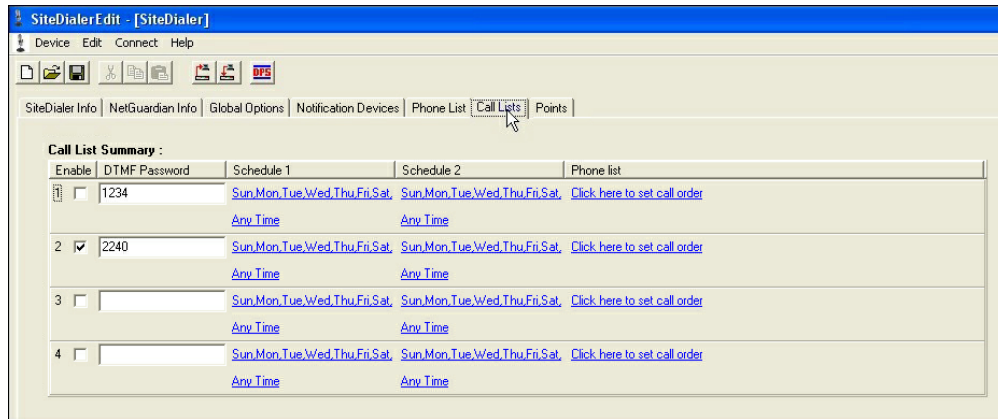


**Fig. 10** Call List Tab


With **Call Lists**, you can set a "call list" for multiple technicians, determining the time during which the SiteDialer can call those technicians and the order in which it should call them. See the table below for descriptions of available fields in the call lists tab.

Field	Description
<b>Enable</b>	Check to enable a call list. The SiteDialer will not send voice notifications to disabled call lists
<b>DTMF Password</b>	The code incoming callers on the call list will dial to acknowledge alarms and perform other DTMF functions
<b>Schedule 1 / 2</b>	Clickable link to edit the days of the week and times of day during which the SiteDialer can call members of the call list. (See Fig. 11 below)
<b>Phone List</b>	Click the link to open the <b>Call Order</b> dialog box. The Call Order determines the order in which the SiteDialer will call members of the call list. Left-click and drag members up and down the list to determine the order. (See Fig. 12, below)

*Available fields in the Call List tab*

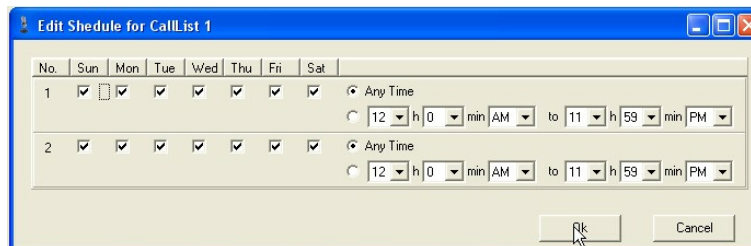

**Fig. 11** Edit Schedule Window

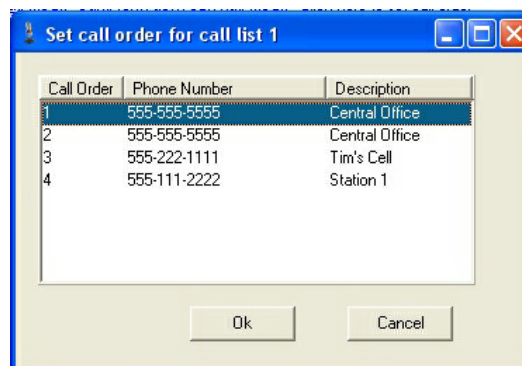

**Fig. 12** The Phone List/Call Order window, opened by clicking the "Click here to set call order" link

3.2.7 Points Tab

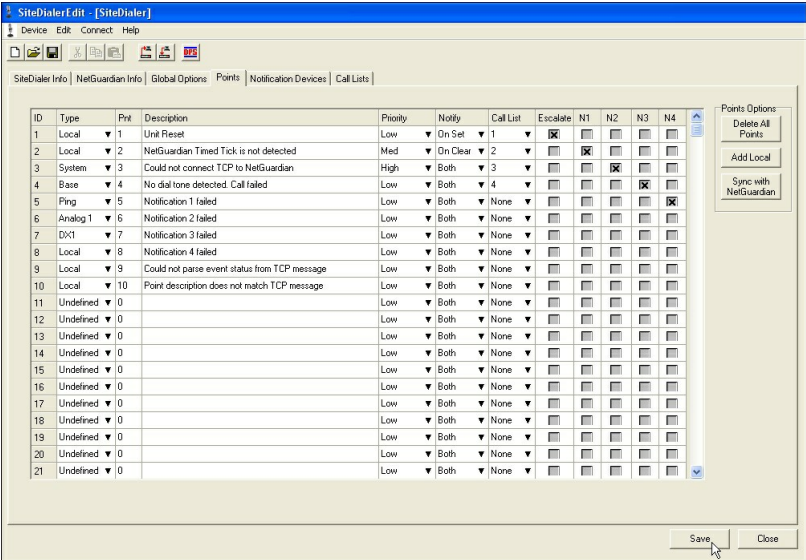


Fig. 13 Points Tab

You can edit point descriptions, call lists, notifications and other alarm settings from the **Points** tab.

### Importing Points:

Load your NetGuardian configuration file (done in the **NetGuardian Info** tab) and click the **Sync with NetGuardian** option to automatically populate the Type, Pnt, and Description fields for all applicable alarms. **Once populated, do not edit these fields.** Editing information retrieved from the NetGuardian could prevent the SiteDialer from sending voice notification for alarms. You may still, however, set the alarm priority, call list, and notification options for each point. See the table below for options and descriptions of available fields in the **Points** tab.

Field	Description
<b>Type</b>	<p>The Point/Alarm type:</p> <ul style="list-style-type: none"> <li>• <b>Base</b> - Discrete points local to your NetGuardian (points 1-32 or 1-64 depending on your NetGuardian model)</li> <li>• <b>Ping</b> - Ping alarms (points 1-32)</li> <li>• <b>Analog</b> - Analog threshold alarms</li> <li>• <b>System</b> - NetGuardian system alarms; the set of housekeeping alarms that help users determine the status of their NetGuardian</li> <li>• <b>DX1-3</b> - Discrete alarms on a NetGuardian DX expansion unit</li> <li>• <b>DX1-3 Alg 1-8</b> - Analog inputs on a NetGuardian DX expansion unit.</li> <li>• <b>Local</b> - Alarms local to the SiteDialer (SiteDialer system alarms)</li> </ul> <p><b>Note:</b> Importing a NetGuardian configuration file will populate the Type field. Do not change a point's type once you have imported a NetGuardian configuration file. The SiteDialer will not dial out if a point's type (along with other critical alarm information) does not match the type listed on the NetGuardian.</p>
<b>Pnt</b>	The point number
<b>Description</b>	A description of the alarm - imported from your NetGuardian's configuration file.
<b>Priority</b>	The alarm priority: low, medium, or high
<b>Notify</b>	Determine whether you want the SiteDialer to send notifications for Alarms, Clears, or both
<b>Call List</b>	Set which call list, 1-4, you want the SiteDialer to call in the event of an alarm
<b>Escalate</b>	If checked, the SiteDialer will only issue notifications N1-N4 if the alarm goes unacknowledged by members of the call list.
<b>N1-N4</b>	Determines which notifications (email/SNMP trap) you want sent for each alarm.

*Fields available in the Points tab*

To the right of the points table, you will find options to create or delete points.

- **Delete All Points:** Deletes all established points
- **Add Local:** Imports points from list of SiteDialer local alarms
- **Sync with NetGuardian:** Synchronizes points with the associated NetGuardian Device

## 4 Quick Start: How to Import Points

You can import points from an existing NetGuardian database. Follow directions in **section 3.2.2.1** to import an associated NetGuardian database .mdb file.

**Note:** Be sure that the Unit IP address and Port number under **NetGuardian Info** tab matches NetGuardian Unit information.

From the **Points** tab, click on the **Sync with NetGuardian** button. This will automatically import all points in the file that have been associated with a TCP notification. A popup window will appear after points have been successfully uploaded, informing you of how many points you've imported.



Fig. 14 Successful Sync with NetGuardian

**Note:** SiteDialerEdit will only import alarm points that have been associated with a TCP notification device. If points in file aren't associated with a TCP notification device, then no points will be imported. For help creating the TCP notification for alarms on the NetGuardian, see your SiteDialer Hardware Manual.



Fig. 15 Unsuccessful Sync with NetGuardian

### 4.1 Message Format

SiteDialer points are triggered by messages from the NetGuardian for alarm events. These messages are compiled in a specific format. If not using a DPS Telecom NetGuardian to trigger the SiteDialer, the SiteDialer must receive alarm events in the same message format.

SiteDialer message format:

<b>&lt;MSG_BEG XXXXX&gt;</b>	Header, "<MSG_BEG XXXXX>", must be present, number does not matter
<b>VID :</b>	Vendor ID, tag and line must be present, value does not matter
<b>FID :</b>	Firmware ID, tag and line must be present, value does not matter
<b>SITE:</b>	Site name, tag and line must be present, value does not matter
<b>PNT :</b>	Point Map, format is 99.01.XX.XX (**See note below for XX.XX formatting)
<b>DESC:</b>	Point description, must match PNT (case sensitive) as defined in SiteDialer Edit
<b>STAT:</b>	Alarm state, Must be "ALARM" or "CLEAR" (case sensitive)
<b>DATE:</b>	Date, format is MM/DD/YY
<b>TIME:</b>	Time, format is HH:MM:SS (24 Hour clock)
<b>&lt;ASCend XXXXX&gt;</b>	Terminator, "<ASCend XXXXX>", must be present, number does not matter



Example of an alarm and clear condition:

```
-----
<MSG_BEG 00001>
VID : DPS Telecom
FID : NetGuardian864-G5 v5.1D.0025
SITE: NetGuardian864-G5
PNT : 99.01.01.01
DESC: POINT NUMBER 1
STAT: ALARM
DATE: 07/14/09
TIME: 09:00:48
<ASCend 00001>
-----
```

```
-----
<MSG_BEG 00002>
VID : DPS Telecom
FID : NetGuardian864-G5 v5.1D.0025
SITE: NetGuardian864-G5
PNT : 99.01.01.01
DESC: POINT NUMBER 1
STAT: CLEAR
DATE: 07/14/09
TIME: 09:00:59
<ASCend 00002>
-----
```

\*\*Format of **PNT** tagged line is "PNT : 99.01.XX.XX". All point addresses begin with 99.01. The final four digits, represented by XX.XX in the table above, indicate the two digit display and point references respectively.


If not using a DPS Telecom NetGuardian to trigger SiteDialer voice notifications, input an integer 1-255 in this field. The integer must match the point number as defined in the Points Tab. Define points of this type as "**Base**".

## 5 Quick Start: How to Create Alarm Shout Configurations

Alarm Shout technology will enable you to create your text-to-speech alarm notifications, or upload your own .WAV files. You'll easily create your own custom voice configurations using the online RTU voice wizard in the MyDPS area of the DPS website ([www.dpstele.com/MyDPS](http://www.dpstele.com/MyDPS)).

### 5.1 Create Voice Configurations

To generate voice config files from currently open configuration:

1. Click on the  **Generate and Upload Voice** button at the top of the screen.
2. When prompt appears, select start to send POST request.

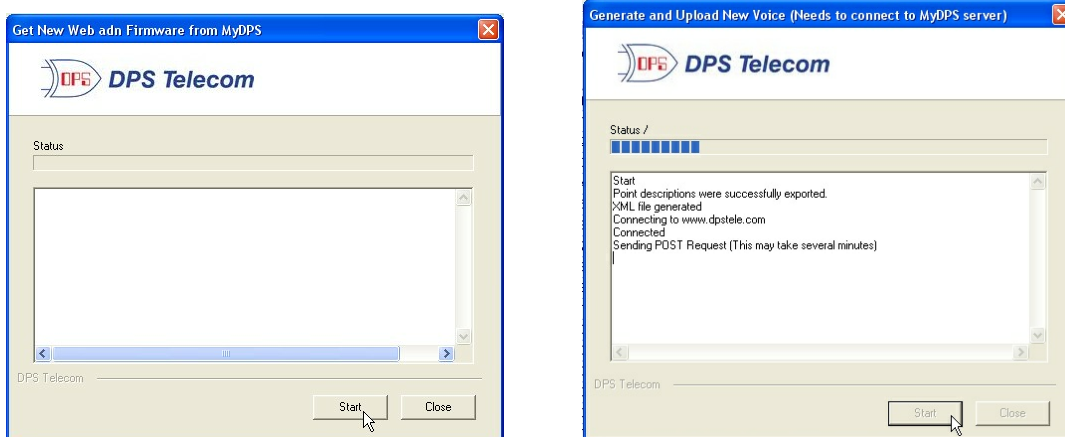


Fig. 16 Send Post Request

3. To upload new web and firmware, type in SiteDialer IP address, user name and password. Select **Check for new firmware** to get the latest firmware version.


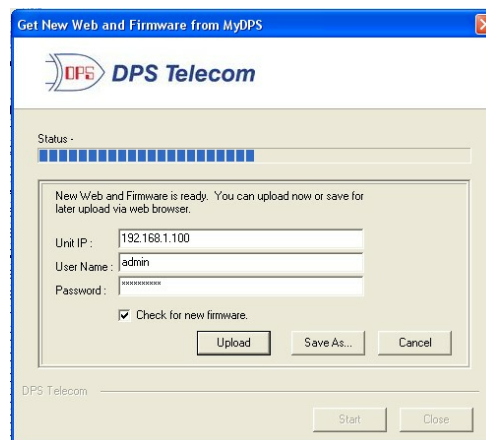


Fig. 17 Upload New Firmware

4. Click **Upload** to upload new web and firmware to the unit. Or click **Cancel** to keep current .bnd file in install directory
5. Click **Save As...** to save new web and firmware to your PC
6. Upload new .bnd file to SiteDialer via SiteDialer web browser

## 6 Technical Support

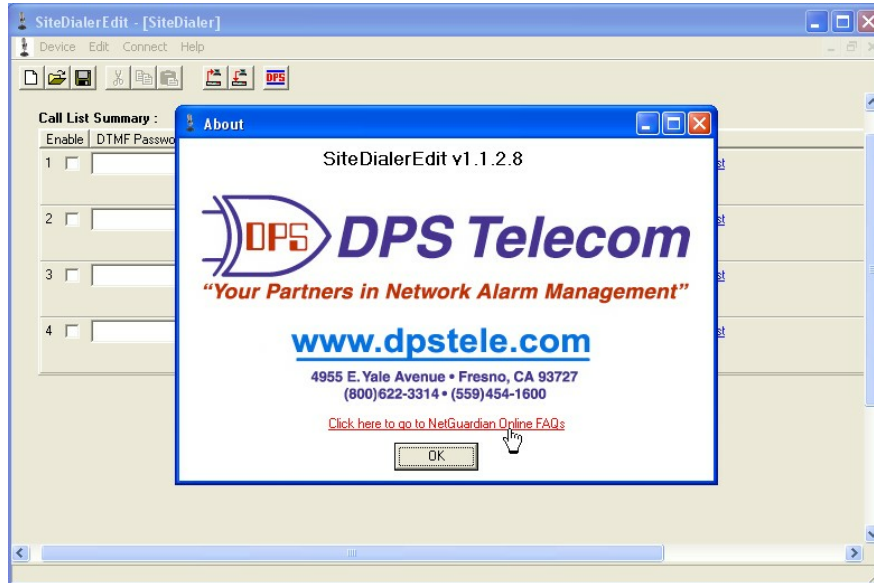

**Fig. 9** Link to DPS website

DPS Telecom products are backed by our courteous, friendly Technical Support representatives, who will give you the best in fast and accurate customer service. To help us help you better, please take the following steps before calling Technical Support:

### 1. Check the DPS Telecom website.

You will find answers to many common questions on the DPS Telecom website. Look here first for a fast solution to your problem. **<http://www.dpstele.com/support/techfaqs/netguardian.php>**

### 2. Prepare relevant information.

Having important information about your DPS Telecom product in hand when you call will greatly reduce the time it takes to answer your questions. If you do not have all of the information when you call, our Technical Support representatives can assist you in gathering it. Please write the information down for easy access. Please have your user manual and hardware serial number ready.

### 3. Have access to troubled equipment.

Please be at or near your equipment when you call DPS Telecom Technical Support. This will help us solve your problem more efficiently.

### 4. Call during Customer Support hours.

Customer support hours are Monday through Friday, from 7 A.M. to 6 P.M., Pacific time. The DPS Telecom Technical Support phone number is **(559) 454-1600**.

**Emergency Assistance:** *Emergency assistance is available 24 hours a day, 7 days a week. For emergency assistance after hours, allow the phone to ring until it is answered with a paging message. You will be asked to enter your phone number. An on-call technical support representative will return your call as soon as possible.*

## 7 End User License Agreement

All Software and firmware used in, for, or in connection with the Product, parts, subsystems, or derivatives thereof, in whatever form, including, without limitation, source code, object code and microcode, including any computer programs and any documentation relating to or describing such Software is furnished to the End User only under a non-exclusive perpetual license solely for End User's use with the Product.

The Software may not be copied or modified, in whole or in part, for any purpose whatsoever. The Software may not be reverse engineered, compiled, or disassembled. No title to or ownership of the Software or any of its parts is transferred to the End User. Title to all patents, copyrights, trade secrets, and any other applicable rights shall remain with the DPS Telecom.

DPS Telecom's warranty and limitation on its liability for the Software is as described in the warranty information provided to End User in the Product Manual.

End User shall indemnify DPS Telecom and hold it harmless for and against any and all claims, damages, losses, costs, expenses, obligations, liabilities, fees and costs and all amounts paid in settlement of any claim, action or suit which may be asserted against DPS Telecom which arise out of or are related to the non-fulfillment of any covenant or obligation of End User in connection with this Agreement.

This Agreement shall be construed and enforced in accordance with the laws of the State of California, without regard to choice of law principles and excluding the provisions of the UN Convention on Contracts for the International Sale of Goods. Any dispute arising out of the Agreement shall be commenced and maintained only in Fresno County, California. In the event suit is brought or an attorney is retained by any party to this Agreement to seek interpretation or construction of any term or provision of this Agreement, to enforce the terms of this Agreement, to collect any money due, or to obtain any money damages or equitable relief for breach, the prevailing party shall be entitled to recover, in addition to any other available remedy, reimbursement for reasonable attorneys' fees, court costs, costs of investigation, and other related expenses.

# Warranty

---

DPS Telecom warrants, to the original purchaser only, that its products a) substantially conform to DPS' published specifications and b) are substantially free from defects in material and workmanship. This warranty expires two years from the date of product delivery with respect to hardware and ninety days from the date of product delivery with respect to software. If the purchaser discovers within these periods a failure of the product to substantially conform to the specifications or that the product is not substantially free from defects in material and workmanship, the purchaser must promptly notify DPS. Within reasonable time after notification, DPS will endeavor to correct any substantial non-conformance with the specifications or substantial defects in material and workmanship, with new or used replacement parts. All warranty service will be performed at the company's office in Fresno, California, at no charge to the purchaser, other than the cost of shipping to and from DPS, which shall be the responsibility of the purchaser. If DPS is unable to repair the product to conform to the warranty, DPS will provide at its option one of the following: a replacement product or a refund of the purchase price for the non-conforming product. These remedies are the purchaser's only remedies for breach of warranty. Prior to initial use the purchaser shall have determined the suitability of the product for its intended use. DPS does not warrant a) any product, components or parts not manufactured by DPS, b) defects caused by the purchaser's failure to provide a suitable installation environment for the product, c) damage caused by use of the product for purposes other than those for which it was designed, d) damage caused by disasters such as fire, flood, wind or lightning unless and to the extent that the product specification provides for resistance to a defined disaster, e) damage caused by unauthorized attachments or modifications, f) damage during shipment from the purchaser to DPS, or g) any abuse or misuse by the purchaser.

THE FOREGOING WARRANTIES ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

In no event will DPS be liable for any special, incidental, or consequential damages based on breach of warranty, breach of contract, negligence, strict tort, or any other legal theory. Damages that DPS will not be responsible for include but are not limited to, loss of profits; loss of savings or revenue; loss of use of the product or any associated equipment; cost of capital; cost of any substitute equipment, facilities or services; downtime; claims of third parties including customers; and injury to property.

The purchaser shall fill out the requested information on the Product Warranty Card and mail the card to DPS. This card provides information that helps DPS make product improvements and develop new products.

For an additional fee DPS may, at its option, make available by written agreement only an extended warranty providing an additional period of time for the applicability of the standard warranty.

## Technical Support

If a purchaser believes that a product is not operating in substantial conformance with DPS' published specifications or there appear to be defects in material and workmanship, the purchaser should contact our technical support representatives. If the problem cannot be corrected over the telephone and the product and problem are covered by the warranty, the technical support representative will authorize the return of the product for service and provide shipping information. If the product is out of warranty, repair charges will be quoted. All non-warranty repairs receive a 90-day warranty.





**“We protect your network like  
your business depends on it”™**



"Your Partners in Network Alarm Monitoring"

**[www.dpstelecom.com](http://www.dpstelecom.com)**

4955 E. Yale • Fresno, CA 93727

(559) 454-1600 • (800) 622-3314 • (559) 454-1688 fax